

## FOR STEEL LED EXIT SIGN AC ONLY – NXS SERIES

### SAVE THESE INSTRUCTIONS

#### IMPORTANT SAFEGUARDS:

When using electrical equipment, always adhere to basic safety precautions including the following:

#### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use outdoors.
2. Equipment should be mounted securely in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel.
3. Do not mount near gas or electric heaters.
4. Cap unused wires with enclosed wire nuts or other approved method.
5. Do not use this equipment for anything other than its intended use.
6. The use of accessory equipment not recommended by the manufacturer will void product listing and warranty and may cause an unsafe condition.
7. Disconnect AC power before servicing and installation.
8. Consult local building code for approved wiring and installation.
9. Installation and service on this equipment should be performed by qualified personnel only.
10. Make sure wire terminations are secure and leads are properly tucked in appropriate wire channels.



#### CANOPY MOUNTING (TOP OR END MOUNT)

1. Remove faceplate and diffuser by removing screw at bottom of housing.
2. Remove (2) 3/16" diameter knockouts at the appropriate location on housing for canopy mounting.
3. Remove center knockout in top or end of housing for wire passage out of the exit sign.
4. Attach canopy to housing with (2) 8-32 screws and (2) lock washer nuts provided.
5. Install (2) provided 8-32 screws into the outer tapped holes in the J-Box mounting plate. Bottom out screw heads on the mounting plate.
6. Determine the direction the fixture should be mounted (which way the face should be pointing). Orient the J-Box mounting plate with the installed 8-32 screws to face the canopy and install the mounting plate with screws (not included) to the J-Box.
7. Feed AC supply and ground wires through the housing center hole, canopy center hole and J-Box mounting plate center hole.
8. Connect the wires in the J-Box as described in the wiring diagram.
9. Mount the canopy/fixture to the J-Box mounting plate with provided acorn nuts.
10. Remove the proper chevron(s), if necessary. Attach faceplate(s) and diffuser(s) to housing with appropriate screw(s) as required.

#### BACK MOUNTING


1. Remove faceplate and diffuser by removing screw at bottom of housing.
2. Remove appropriate knockouts from backplate for proper J-Box mounting.
3. Remove center knockout from backplate for wire passage out of the exit sign.
4. Feed AC supply and ground wires through the backplate center hole and J-Box mounting plate center hole.
5. Connect the wires in the J-Box as described in the wiring diagram.
6. Fasten backplate directly to J-Box with screws (not provided).
7. Remove the proper chevron(s), if necessary. Attach faceplate and diffuser to housing with appropriate screw.

## FOR STEEL LED EXIT SIGN AC ONLY – NXS SERIES

### IMPORTANT SAFEGUARDS:

When using electrical equipment, always adhere to basic safety precautions including the following:

WIRING DIAGRAM

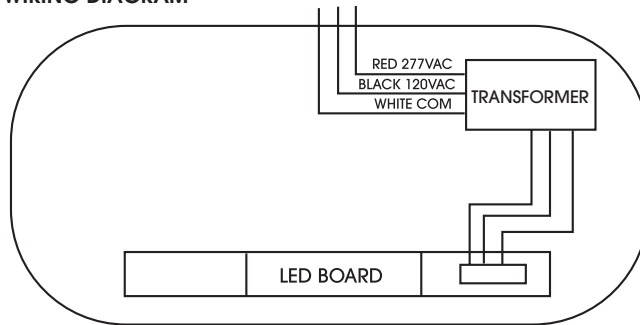

### WARRANTY

Juno Lighting Group warrants that its products are free from defects in material and workmanship. Juno Lighting Group's obligation is expressly limited to repair or replacement, without charge, at Juno Lighting Group's factory after prior written return authorization has been granted. This warranty shall not apply to products which have been altered or repaired outside of Juno Lighting Group's factory. This warranty is in lieu of all other warranties, expressed or implied, and without limiting the generality of the foregoing phrase, excludes any implied warranty of merchantability. Also, there are no warranties which extend beyond the description of the product on the company's literature setting forth terms of sale.

### Product Services Phone (888) 387-2212

1300 S. Wolf Rd • P.O. Box 5065 • Des Plaines, IL 60017-5065 • Phone: 800-323-5068 • [www.junolightinggroup.com](http://www.junolightinggroup.com)



JUNO LIGHTING GROUP