

FOR HARD-WIRE EXIT RETROFIT KIT – NXRH SERIES

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS:

When using electrical equipment, always adhere to basic safety precautions including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use outdoors.
2. Do not use this equipment for anything other than its intended use.
3. Do not mount near gas or electric heaters.
4. Equipment should be mounted in secure locations and at heights where it will not be subject to tampering by unauthorized personnel.
5. This equipment should be serviced by qualified personnel only.
6. Disconnect AC power before servicing and installation.

INSTALLATION INSTRUCTIONS FOR 120VAC AND 277VAC WIRING

1. Disconnect branch circuit power.
2. Install this device in accordance with national, state, and local safety codes.
3. All wiring connections must be made in the wiring compartment/junction box. You may need to remove the exit fixture from its mounted position to access the junction box.
4. Open exit fixture and/or remove face plates, etc.
5. Mount the unit arrays into the mounting brackets. This is accomplished by sliding the neck of the arrays into the mounting brackets.
6. Slide the mounting bracket support into the ends of the channel at the height that provides the best illumination. The arrays mounting brackets can also be adjusted to optimize even illumination by sliding the brackets left or right. Test this position by pre-positioning the assembly before proceeding with Step 7.
7. Peel of paper backing from the double-stick tape on the bottom of the mounting bracket support. Mount the assembly to the fixture.
8. For 120VAC wiring (parallel), connect both white lead wires to the neutral (white) supply wire and both black lead wires to the live (black) supply wire.
9. For 277VAC wiring (series), connect the white lead wire from the left array and black lead wire from the right array together. Connect the remaining black lead wire to the live (black) supply lead.
10. Position wiring for minimal interference with the light from the LED arrays.
11. Remount the exit fixture, if necessary. Install the face plates, etc. and close exit fixture.
12. Reconnect branch circuit power.

WARRANTY

Juno Lighting Group warrants that its products are free from defects in material and workmanship. Juno Lighting Group's obligation is expressly limited to repair or replacement, without charge, at Juno Lighting Group's factory after prior written return authorization has been granted. This warranty shall not apply to products which have been altered or repaired outside of Juno Lighting Group's factory. This warranty is in lieu of all other warranties, expressed or implied, and without limiting the generality of the foregoing phrase, excludes any implied warranty of merchantability. Also, there are no warranties which extend beyond the description of the product on the company's literature setting forth terms of sale.

Product Services Phone (888) 387-2212

1300 S. Wolf Rd • P.O. Box 5065 • Des Plaines, IL 60017-5065 • Phone: 800-323-5068 • www.junolightinggroup.com

